

Instructions For:

Economy Retractor- 31.5"

1. Base
2. Banner Rail
3. Poles w/ Stretch Cord

Note:

Visible Graphic: 31.5" W x 78.75" H

Total Graphic Print Size: 31.5" W x 84.87" H


Bottom Bleed: 6" of material will roll into the retractor.



Step 1

Take all parts out of the bag.
Place the banner on a flat surface.

If your Banner has a Pole Pocket:
Remove one Rubber End from the Banner Rail (2).
Insert a Wood Dowel into the Pole Pocket, and slide the two together into the round portion of the Banner Rail.
Replace Rubber Ends.

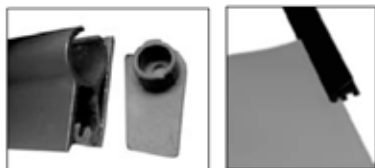


If your Banner does not have a Pole Pocket:
Snap the Banner Rail (2) open.
Slip the top of the Banner into the bottom of the Banner Rail (2) and clamp it shut.




Step 2

Lay the banner flat, printed side down. On the Base (1) you will find two strips of paper. Remove them to expose the adhesive.
Firmly and evenly press the bottom of the banner onto the adhesive.

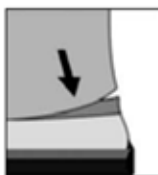

Step 3

Maintain tension on the banner while slowly removing the pin.
Allow the banner to gently roll into the canister.

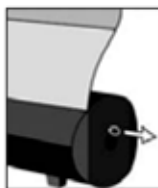

Step 5

Flip the Base (!) upside down and rotate the legs to sit perpendicular to the Base (1).



Step 6

Assemble the Poles (3).
Insert bottom of assembled Pole (3) into the hole in the top of the Base (1).



Step 7

Stand facing the back of the Base (1).
Gently pull the Banner Rail (2) straight upwards. Hold the Pole (3) and the Banner Rail (2) and step backwards. Tilt the unit onto its back and step backwards until you can place the hook on the Banner Rail (2) securely in the hole in the top of the Pole (3).
Stand the unit upright.

